
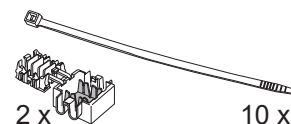


**OPEL | ASTRA L Sports Tourer | 10.2021 –**  
**OPEL | ASTRA L | 10.2021 –**

**PEUGEOT | 308 III (FB\_, FH\_, FP\_, F3\_) | 07.2021 –**  
**PEUGEOT | 308 SW III (FC\_, FJ\_, FR\_, F4\_) | 07.2021 –**



|            |                          |
|------------|--------------------------|
| <b>D</b>   | Inhalt                   |
| <b>GB</b>  | Packing list             |
| <b>F</b>   | Contenu                  |
| <b>NL</b>  | Inhoud                   |
| <b>DK</b>  | Indeholder               |
| <b>N</b>   | Innholds-<br>fortegnelse |
| <b>S</b>   | Innehåll                 |
| <b>FIN</b> | Sisältö                  |
| <b>I</b>   | Contenuto                |
| <b>E</b>   | Contenido                |
| <b>CZ</b>  | Obsah                    |
| <b>H</b>   | Tartalma                 |
| <b>RU</b>  | Содержание               |
| <b>LT</b>  | Sudėtis                  |
| <b>LV</b>  | Sastāvs                  |
| <b>EST</b> | Sisu                     |
| <b>SK</b>  | Obsah                    |
| <b>PL</b>  | Zawartość                |

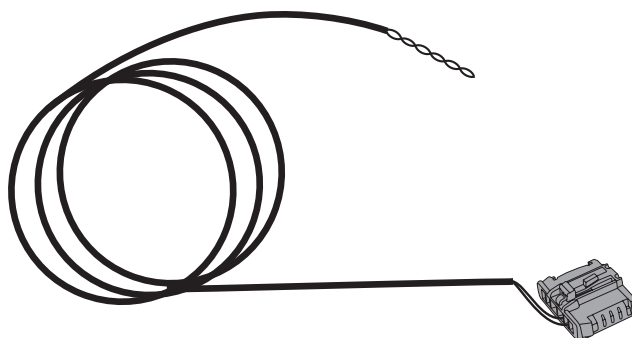

2 x


10 x

1

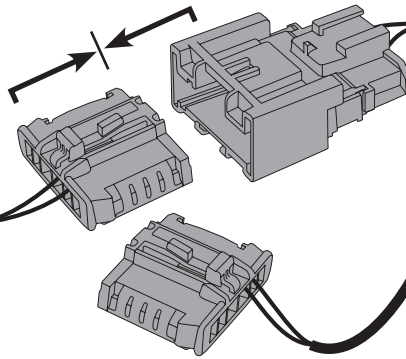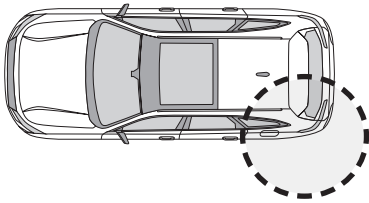


E-Satz → E-Satz  
e-kit → e-kit

2

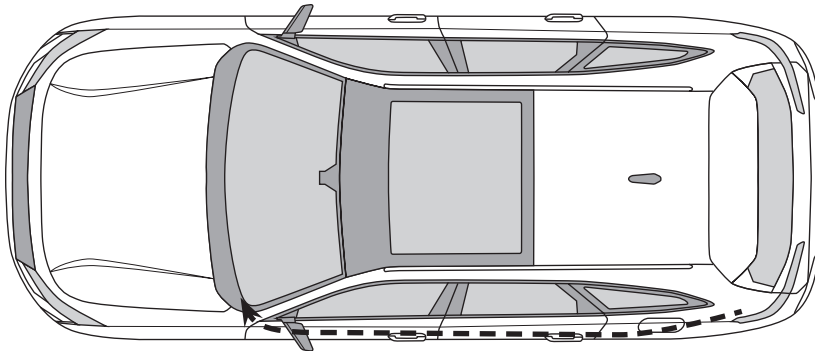


E-Satz →  
e-kit →

3

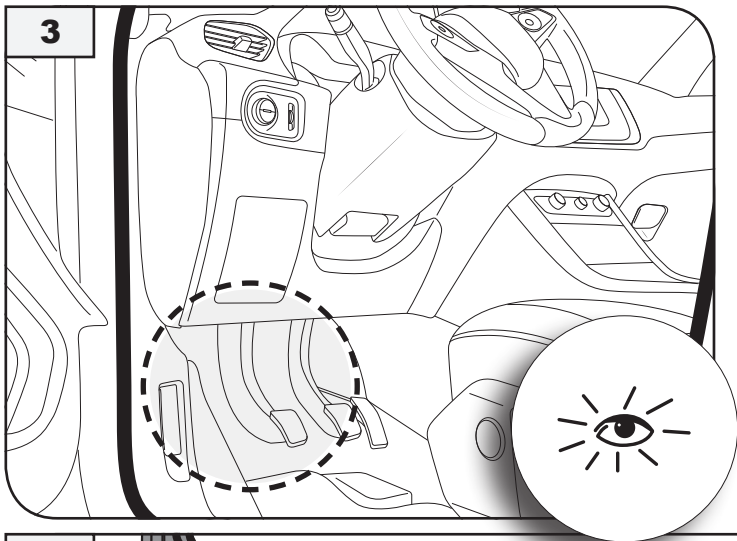

4

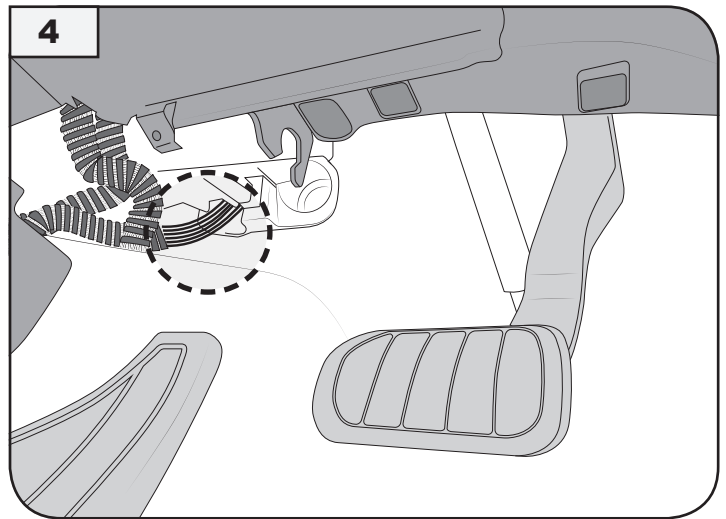

5

**CAN**

1. Insert the cable into the connector.

2. Click the connector into place.

3. Connect the cable to the car's CAN bus.

**CAN H** **CAN L**

|         | CAN H        | CAN L |
|---------|--------------|-------|
| ASTRA L | beige (pink) | gy    |
| 308     | pu           | pink  |

**E-Satz or/gn → kabel CAN H, E-Satz or/bn → kabel CAN L**  
**e-kit or/gn → cabel car CAN H, e-kit or/bn → cabel CAN L**

**CAN H** **CAN L**

or/gn pu (beige (pink)) pink (gy) or/bn